

Roof Rack Installation Guide



2nd Gen Nissan Frontier Crew Cab

 
THANK YOU for purchasing this Prinsu product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. **If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call Prinsu at (208) 528-0664 as soon as possible.**

PRINSU will warranty all PRINSU manufactured parts for a LIFETIME of use. This limited Lifetime Warranty is effective for as long as the original retail purchaser owns the product. This warranty terminates when the original retail purchaser sells or otherwise transfers the product to any other person. Each manufactured product must be installed following PRINSU'S recommended fitment and installation procedures. Any customization or modification to the original product design, functionality, or use, either by said customer or by PRINSU voids all warranty eligibility. It is the sole discretion of PRINSU to determine warranty eligibility. Subject to the limitations and exclusions described in this warranty, PRINSU will remedy defects in materials or workmanship by repairing or replacing, at its option, a defective product without charge for parts. In addition, PRINSU may elect, at its option, not to repair or replace a defective product but rather issue to a purchaser a refund equal to the purchase price paid for the product or a credit to be used toward the purchase of a new PRINSU product. No warranty is given for defects caused by normal wear and tear, cosmetic rust scratches, accidents, unlawful vehicle operation, products used for racing or competition, or modification of, or any types of repair of, a PRINSU manufactured product. The PRINSU Warranty does not include the powder coated finish. No warranty is given for defects resulting from conditions beyond PRINSU'S control including, but not limited to, misuse, neglect, overloading, improperly maintained or failure to assemble, mount or use the product in accordance with PRINSU'S written instructions or guidelines included with the product or implied use made available to the purchaser. Disclaimer of liability repair or replacement of a defective product or the issuance of a refund or credit (as determined by Prinsu) is a purchaser's exclusive remedy under this warranty. Damage to a purchaser's vehicle, cargo and/or to any other person or property is excluded. This warranty is expressly made in lieu of any and all other warranties, express or implied, including the warranties of merchantability and fitness for a particular purpose. Prinsu's sole liability to any purchaser is limited to the remedy set forth above. In no event will Prinsu be liable for any lost profits, lost sales, or for any consequential, direct, indirect, incidental, special, exemplary, or punitive damages or for any other damages of any kind or nature

Hardware

(A) x 28

1/4"-20 x 1" 6 Lobe Pan Head Screw



(B) x 38

1/4" x .625 OD Flat Washer



(C) x 10

1/4"-20 T Nut



(D) x 10

1/4"-20 x 1/2" Phillips Pan Head Screw



 
(E) x 8

1/4"-20 Steel Pre Bulbed Plus Nut



(F) x 8

1/4"-20 x 2" Steel Hex Cap Screw



(G) x 8

1/4" x 0.734" OD Flat Washer



(H) x 4

1/4"-20 x 3/4" Steel Carriage Bolt



(I) x 8

Aluminum Spacer: 1/4" x 1.375 OD x 3/8" Long



 
(J) x 4

1/4"-20 x Steel Nylon Insert Locking Nut



(K) x 1

1-1/8" Steel Coupling Nut





(L) x 3

Vibratite Tube






(M) x 1

 1/4"-20 x 2" Steel Hex Cap Screw

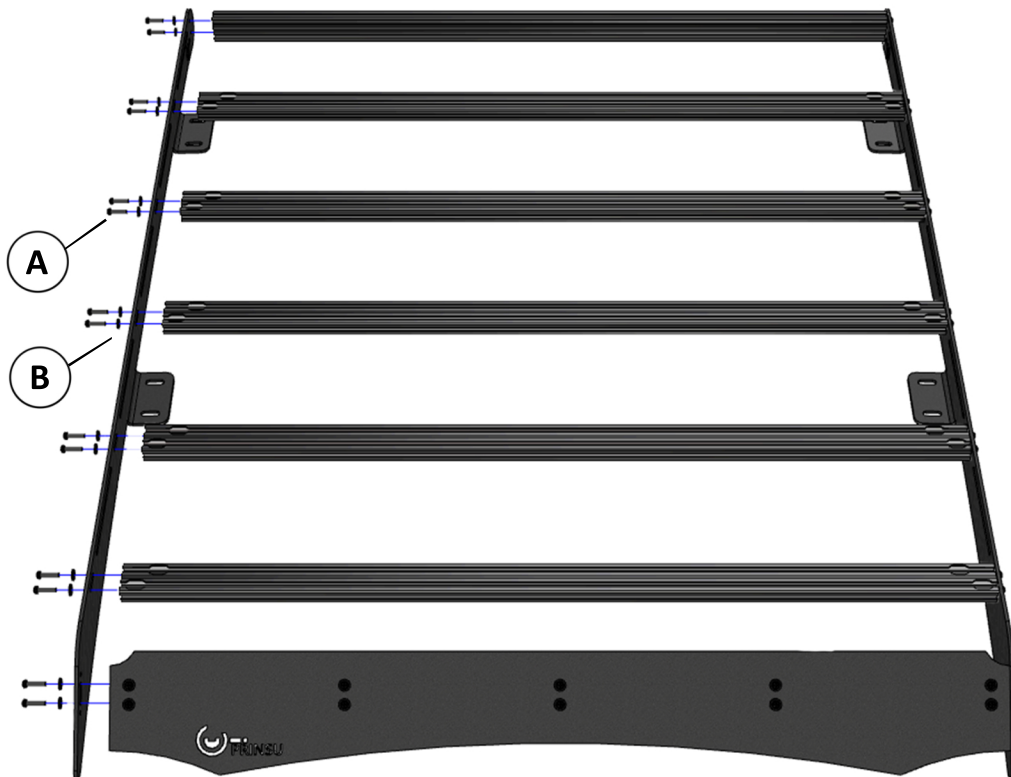


*NOTE: The appropriate torque for a 1/4 - 20 grade two bolt is between 37 - 43 in-lbs. Which is approximately 3 ft- lbs. The heads will shear off between 15-20 ft-lbs. Use caution when using power tools.

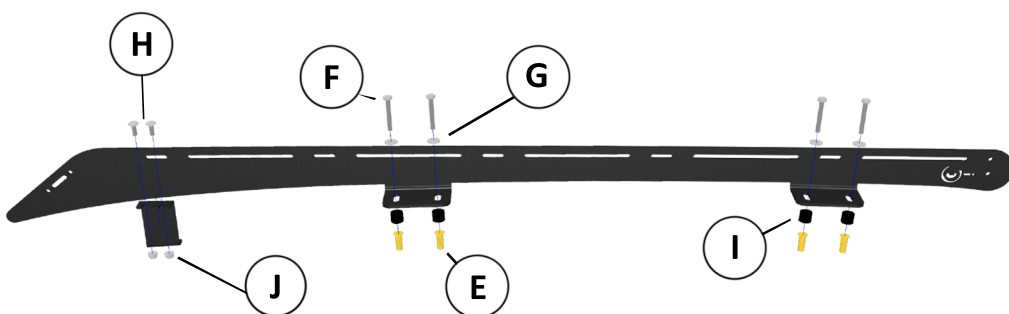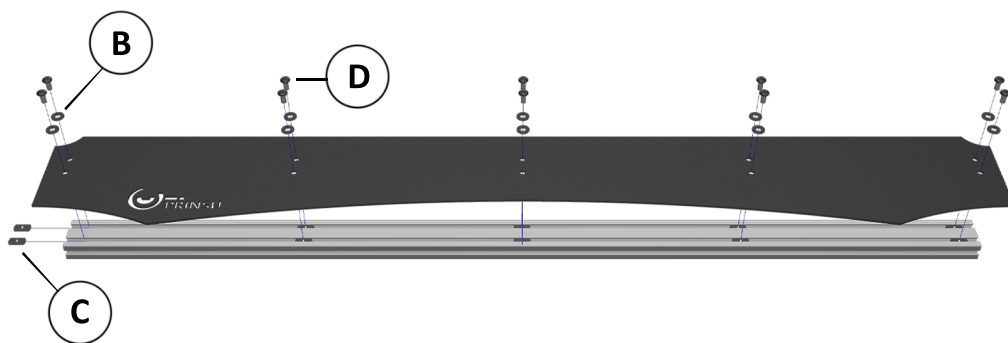

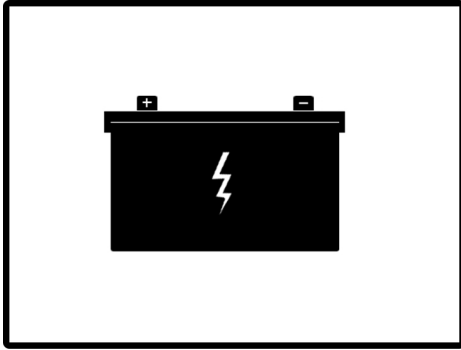

Before beginning work it is recommended to disconnect the battery

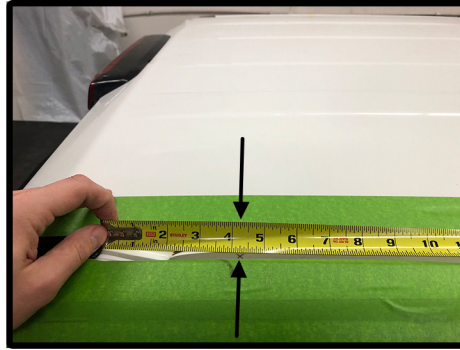


Measure 4.25" from the black plastic trim as shown above and mark both the driver & passenger sides




Using a spacer trace out the area around it to trim out factory sealant



Factory sealant removed

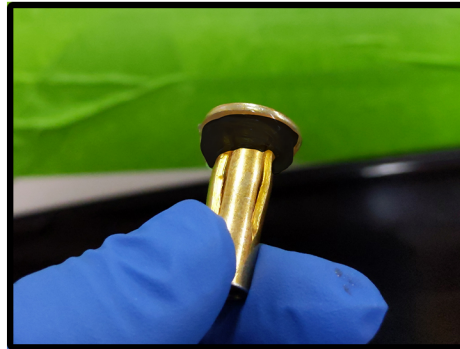


Apply a thin ring of silicon around the edge of the plusnuts

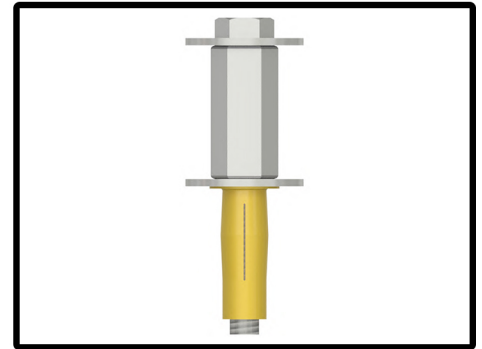

Using the supplied hex coupler (K) washers (G) and bolt (M) tighten the plusnut firmly by hand



Place in hole & compress with a 1/2" wrench around the hex coupler and 7/16" wrench for the bolt

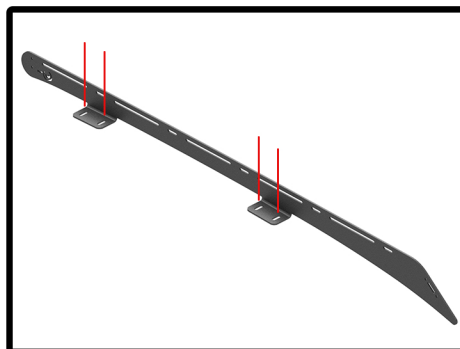


Now place the side rails on the vehicle and bolt in the rear. You can now mark and drill the remaining locations.




Align the front mounting foot with the first small slot in the side rail. Mark around it to trim out the sealant




Trim out the sealant to expose the bare metal for the 3M™ tape to adhere to.

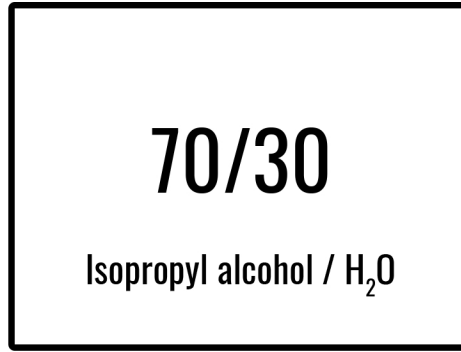


Prep the surface by lightly scuffing it with scotch-brite™. Then Clean the surface with a mixture of isopropyl alcohol and H₂O.

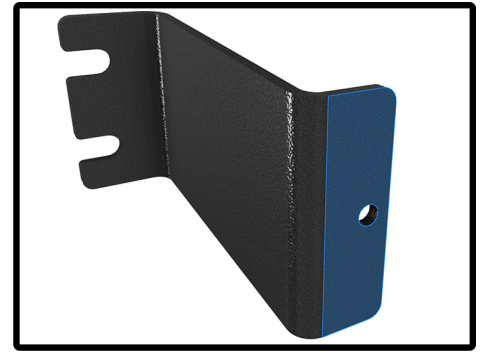


Remove the backing from one side and place it on the bracket as shown. Apply light even pressure over the whole surface to facilitate proper adhesion.

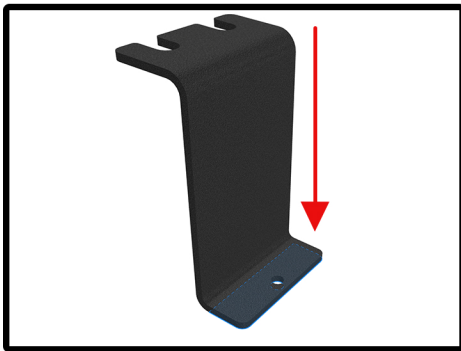

Remove the backing from the otherside and place the bracket on the roof. Apply light even pressure over the whole surface to facilitate proper adhesion.

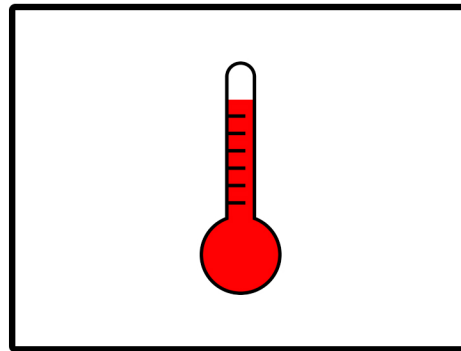


For best results a temperature range of 70° F - 100° F is recommended at the time of application (*)

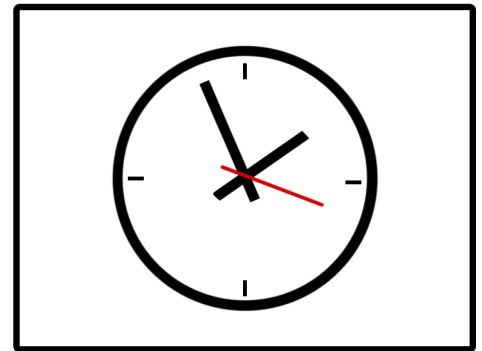

1 hr of set time will allow for the tapes' bond strength to build up to 75% of its ultimate bond strength (*)



Apply a liberal amount of silicon over the plusnuts, place your spacers down, and then bolt on the rack.

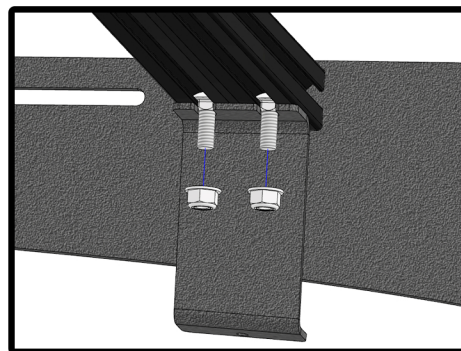

After the recommended 1 hour has passed attach the mounting foot to the crossbar in the order shown above.



Before your 1st drive double check all fasteners to insure they are fully secured and then periodically there after over the lifetime of your rack.