

TOYOTA RAV 4

DITCH LIGHT BRACKETS



Applications

installation instructions

These installation instructions apply to the following CBI Off Road products

RAV4-DLB – 2019-2021 Toyota RAV4 Ditch Light Brackets

IMPORTANT!


THANK YOU for purchasing this CBI product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. ***If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call CBI at (208) 528-0664 as soon as possible.***

IMPORTANT!

If your CBI product comes as unpainted, bare steel or aluminum. You will want to either powder coat or paint prior to final installation, however it is very important to PRE-INSTALL the unpainted product first, following these instructions, BEFORE painting or powder coating any of the components! This will ensure that all parts are correct and any incidental trimming or drilling will have been done prior to coating. Also, it will give you a practice run to familiarize yourself with the process, to lessen the likelihood of damaging the finish during final installation.

CBI Off Road is NOT RESPONSIBLE for paint or powder coating costs, damage to paint or powder coating, or costs associated with inadvertently painting or powder coating components that are defective or were shipped or assembled in error. It is the customer's responsibility to pre-install and verify that all parts are correct prior to paint or powder coat

Hardware: What is included

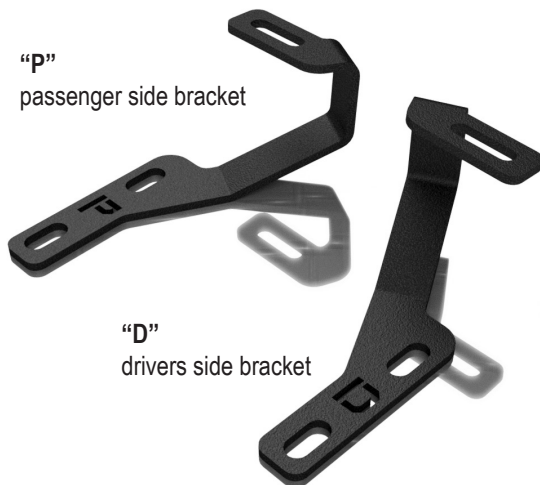

Installation

Note: We recommend doing one side at a time so you don't have to realign your hood after install.

1.

Start by removing the top bolt from the hood hinge. This is the bolt closest to the front of the vehicle on the hinge.

2.


Reinstall the bolt with the Ditch Light Bracket at an angle so you can still remove the lower hinge bolt as shown in picture 2. You will want to tighten this bolt only slightly. Just until it seats should be enough.




3.



4.

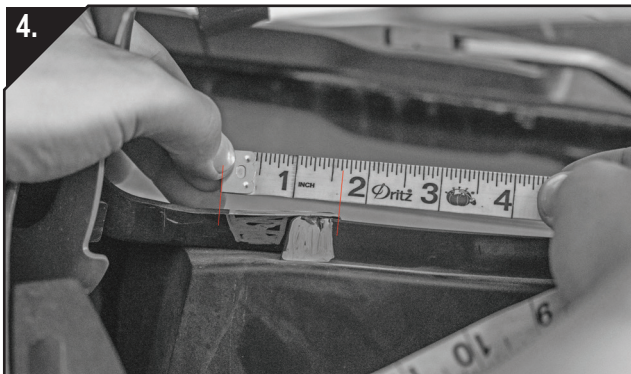

5.

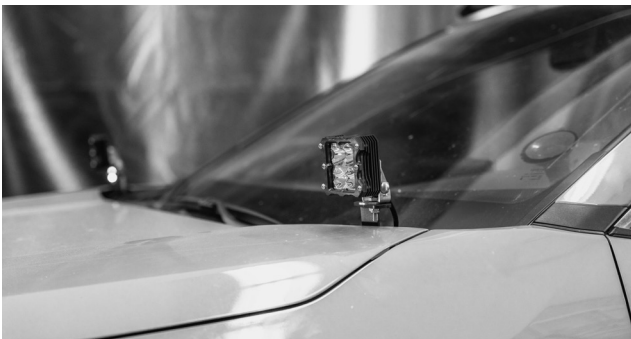

3.

Next remove the lower bolt from the hinge. Once removed swing the Ditch Light bracket over so the lower holes line up. Now reinstall the lower hinge bolt and fully tighten both bolts.

4.

It is necessary to trim the plastic trim on the passenger side to clear the Ditch Light Bracket. There are two parts to this trim. The front trim is more of a rubber trim while the back is more of a rigid plastic trim. Using the plastic trim closest to the windshield as a guide cut the front rubber trim so it lines up with the rear plastic trim. For the plastic trim, measure over from the edge roughly 1-5/8"

5.

This is what the trim will look like once it is trimmed.

Questions?

Call: 866-522-0697

Email: info@cbioffroadfab.com



792 E Iona Rd.
Idaho Falls, ID 83274
cbioffroadfab.com
208.528.0664